



Mobile Rolling Spring Adjustable Floor Stand with Premium Locking Enclosure (White) for Small Tablets

PAD-MSAPSWW


INSTRUCTION - MANUAL

CONTENTS:


CP-DMCFCVS156

CP-UX700156S


CP-SMBCVS156

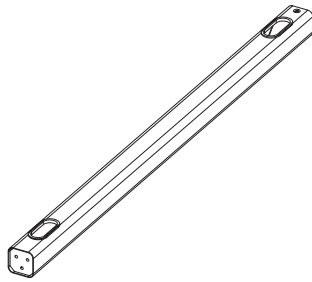

A (x1)

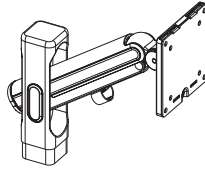

B (x1)

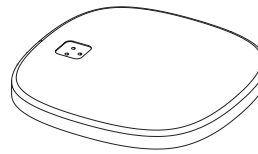

C (x1)



M-A (x4)
M4x12



M-B (x4)
D5



D (x2)
M5x10




E (x3)
M6x20




F (x1)
3mm




G (x1)
5mm (Long Type)

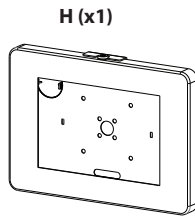

H (x1)

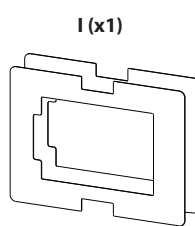

I (x1)

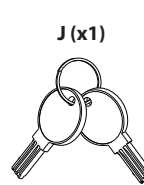

J (x1)




x4
M5 Nut

INSTALLATION:

1. Assembling Base to Body




Note: Keep the cable holes to the side facing up as shown

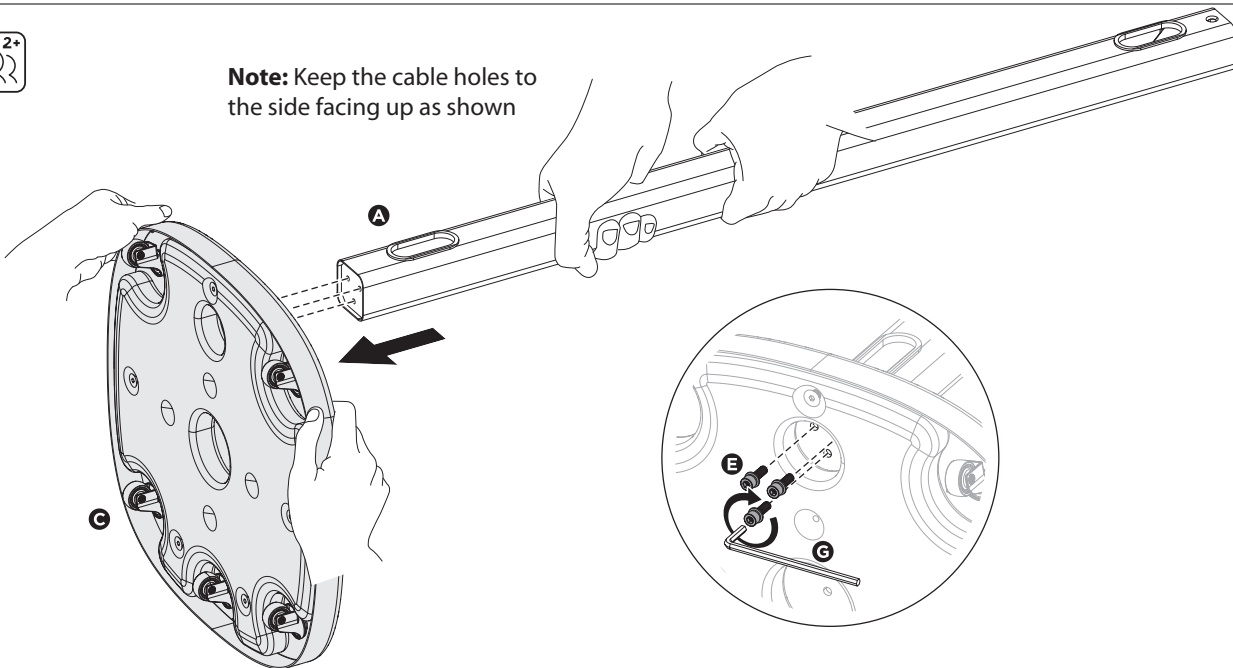


1A - Align the mounting holes at the bottom of the floor stand body (A) to the weighted base (C) mounting holes as illustrated above. Rotate in three screws (E) from below the base using provided tool (G) until securely tightened.



2. Removing VESA Plate Component from Arm 3. Attaching Articulating Arm to Body

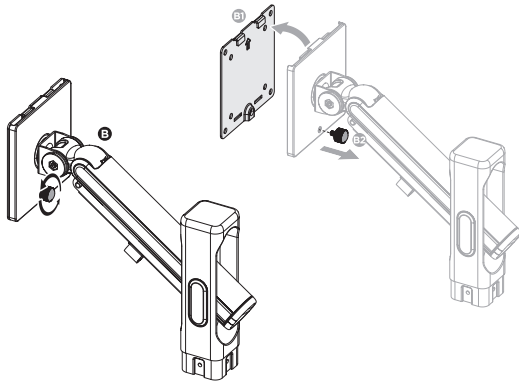


2A- Identify the knob on the VESA plate joint as shown. Rotate counter clockwise to loosen. Then lift up and out the front part of the VESA plate to remove and separate from the arm.

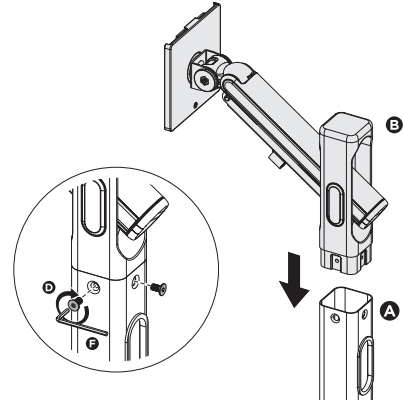

3A- Take the articulating arm component (B) and slide it down on the body (A) as shown. Rotate in the two screws (D) using provided tool (F) until securely tightened.


4-Placing Tablet into Enclosure

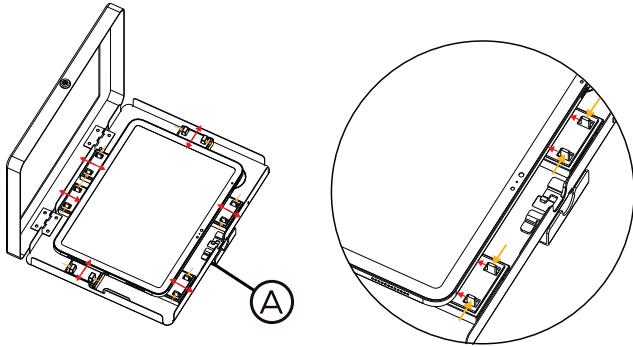

4A. Start by extending the adjustable clips all the way to the edge. As shown in orange, you pinch the two vertical pieces and then you can slide them inward or outward. You want to slide all of the as far out to the edge to start.


4B. Place the tablet in the center of the case. Now pinch the vertical pieces on each clip (shown in orange) and slide them inward towards the tablet. Make sure the vertical piece on each adjustable clip is right on the edge of the tablet securely and snug. You may need to go back and forth to make sure the tablet screen is as closely aligned to the enclosure cutout as possible. If device is smaller than screen, use sheets (I) to cover gap.

4C. Plug in the charging cable (not included) and route the cable out the back hole as illustrated.

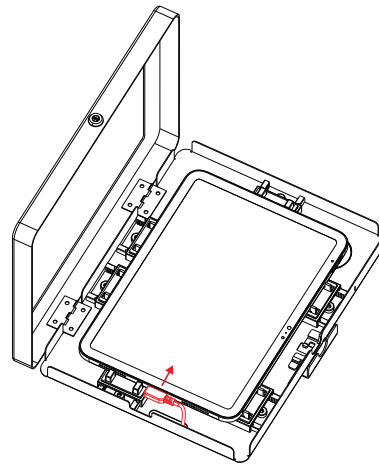


5-Removing Back Covers

****Tablet shown for illustration only, NOT INCLUDED.**

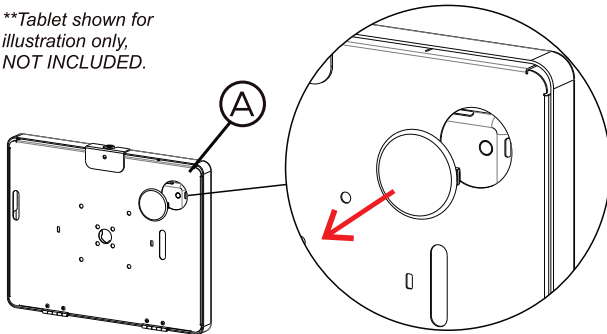


5A. When installing device into the enclosure, identify where the camera is. Then simply remove and pop out the cover prior to mounting or setting up tablet to properly expose camera.


6. Attaching VESA Plate to the Enclosure

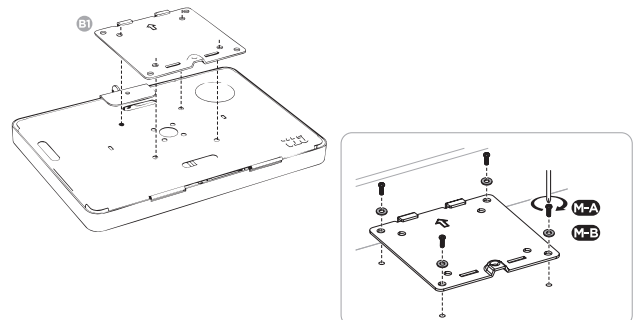

6A- Take the now removed front VESA plate component and align VESA mounting holes to that of your device (not included). Rotate in four screws (M-A) and four washers (M-B) from behind at the mounting holes using screwdriver tool (not included) until securely tightened.

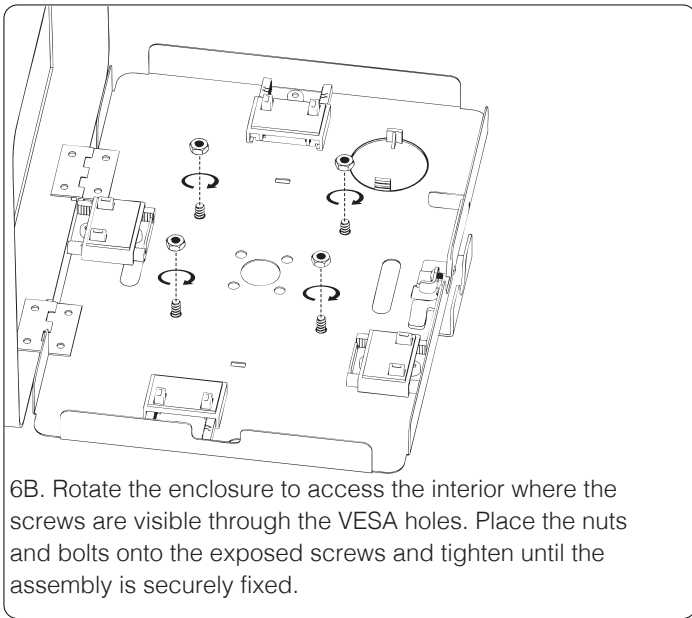


8. Cable Routing



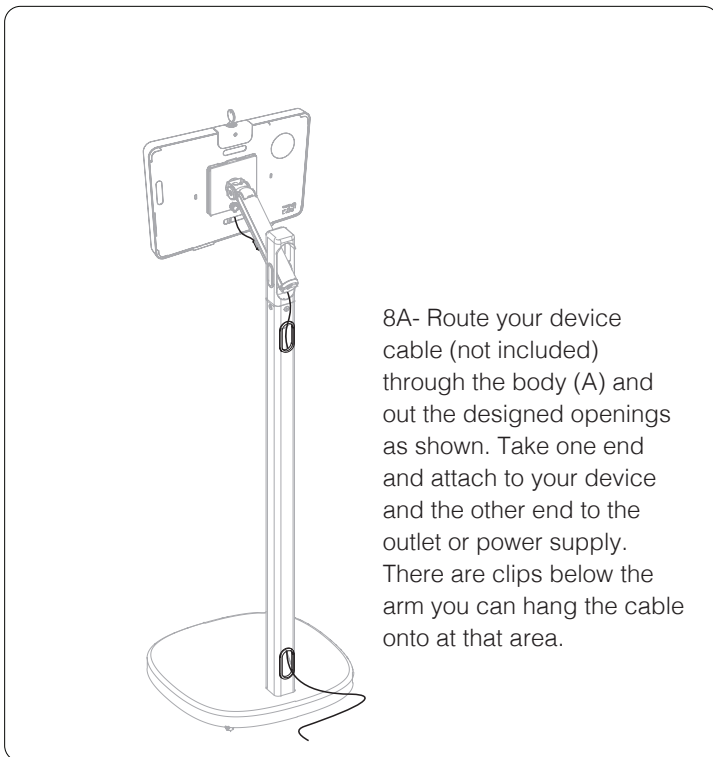


7. Attaching VESA Plate & Device Back to Arm

7A- Take the now attached device and front VESA plate component and slide downward back to the back VESA plate counterpart component on the articulating arm (B) to attach. Rotate the knob to tighten and secure as shown.

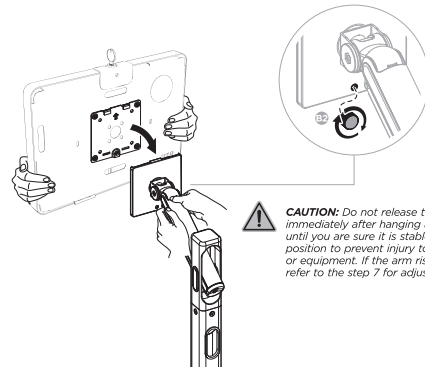

  9. Height Adjustability & Tilt Adjustability

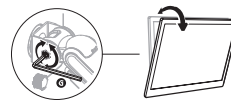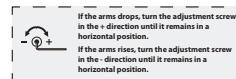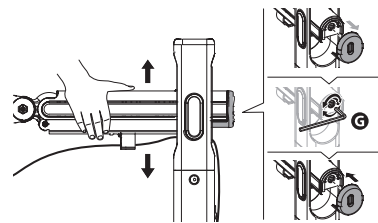

Note: If the display does not stop at your desired position, adjust the screws using the tools as shown.



9A- When adjusting the arm height, first remove the end cap at the back side as shown. Take the provided tool (G) to loosen the resistance. Adjust the arm up or down to desired location. Use the same tool to tighten and then place the end cap back on to set the arm.

9B- When adjusting the device angle tilt, first loosen the VESA joint as shown to the left with provided tool (G) first. Use your hands and tilt forward or back to your ideal preference. You can also rotate it for portrait or landscape orientations. Make sure to unplug all wires first. Retighten the joint when all adjustments are finished to lock it in.