




Add-On VESA-Compatible Mounting Bracket for Ingenico Universal Payment Mount Devices and Storm ADA Device

CP-ADACRH

INSTRUCTION - MANUAL


CONTENTS:

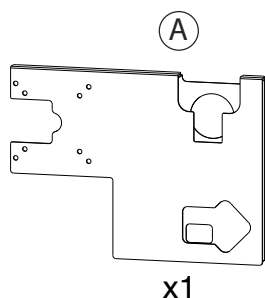


M5 Allen Key (1)

INSTALLATION:

1. Mounting Add-on bracket with kiosk and display:

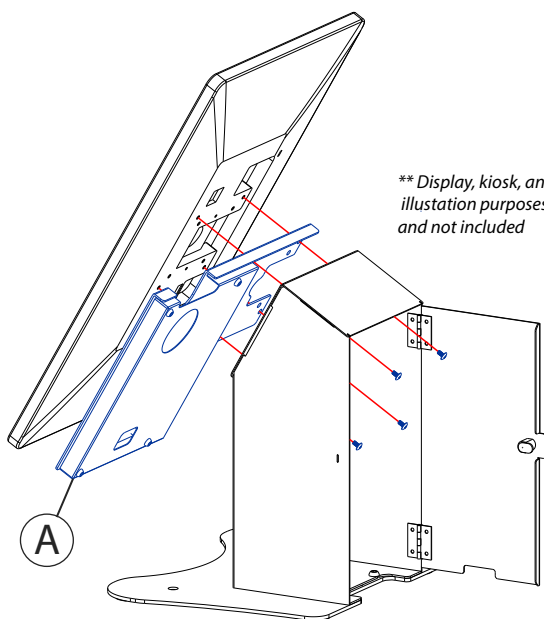

**** Display, kiosk, and screws are for illustration purposes only and not included**

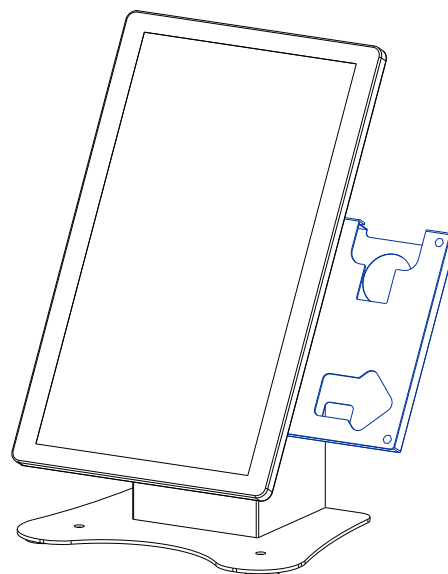


**** Display and kiosk are for illustration purposes only and not included**

1A. Align the VESA mounting holes of the kiosk (not included) with the bracket and the display/monitor(not included). Rotate in four screws (not included) from the interior of the kiosk as illustrated above. Rotate using a screwdriver tool (not included) until securely tightened.




2. Setting up the card reader device to bracket


**** Device for illustration purpose only. Not Included.**

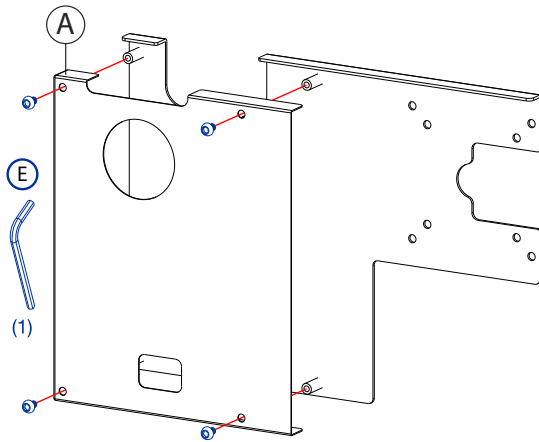

2A. Remove the back plate of the bracket by using provided tool (E) and loosen the four integral screws as shown. Set aside the back plate and integral screws for now.

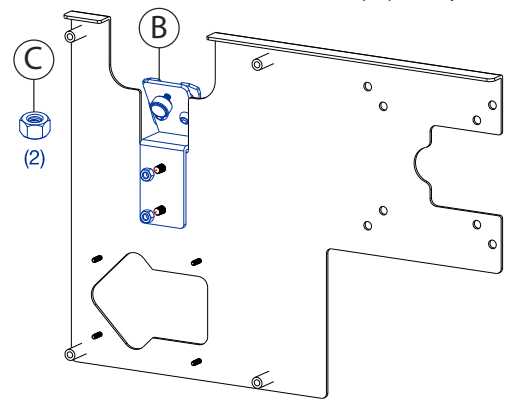



2B. Take the card reader holder adapter (B) and align the bottom two mounting holes to the location on the bracket with the two male adapters as shown above. Rotate on two hex nuts (C) until securely tightened.

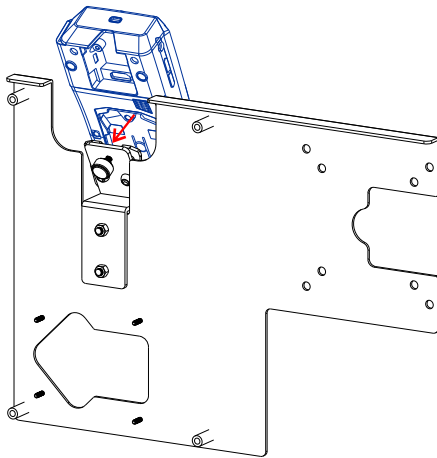


2C. Take your card reader device (not included) and align the card reader holder male adapter to the female adapter on the back of the card reader device. Once aligned and inserted properly, rotate the knob on the back of the card reader holder until securely tightened. This will lock everything in place.

3. Setting up the keypad device to bracket

**** Devices for illustration purpose only. Not Included.**

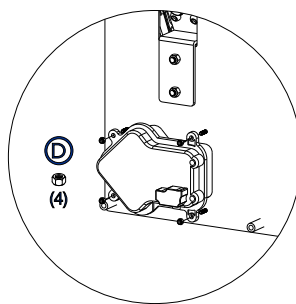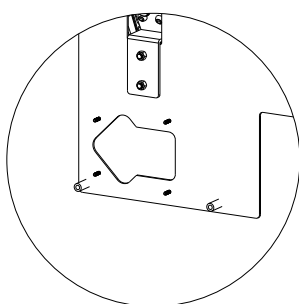

3A. Identify the keypad space on the bracket. There are four male adapters around the perimeter. Place your keypad device from behind the bracket facing the same orientation as the card reader with the mounting holes onto the male adapters. Rotate on four hexnuts (D) from behind onto the male adapters until securely fitted as shown above.

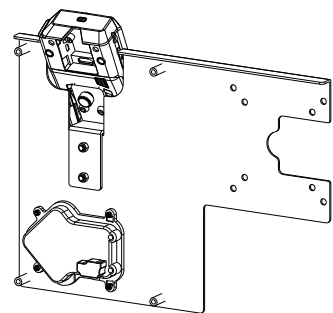

3B. Take the removed back plate from earlier and realign the same mounting holes of the bracket to the backplate. Rotate on the four integral screws using provided tool (E) until securely tightened as shown to the left. Installation for the bracket is completed.

