

Rust Proof Security Desk Mount


PAD-RPDMS


INSTALLATION - MANUAL

CONTENTS:

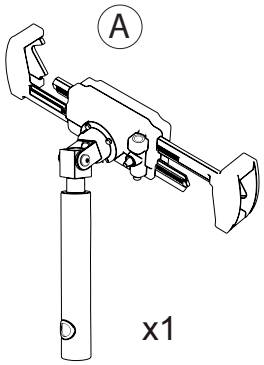

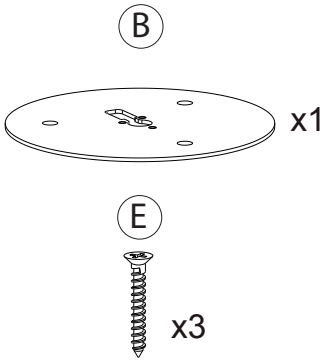


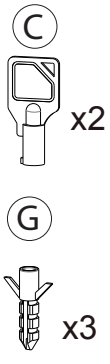

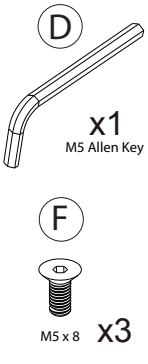


INSTALLATION:

1. Assembling Base to Body

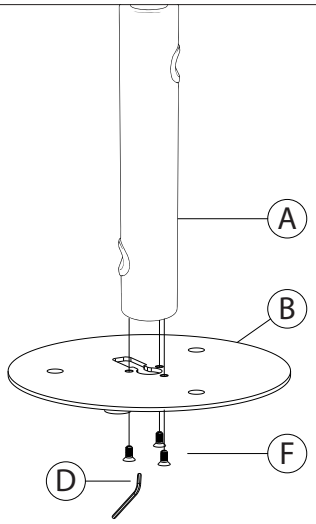

1A. Align holes at the base (B) with the holes on the base of the body (A). Screw in bolts (F) with the provided allen key tool (D) as shown.

2. Cable Routing / Cable Management

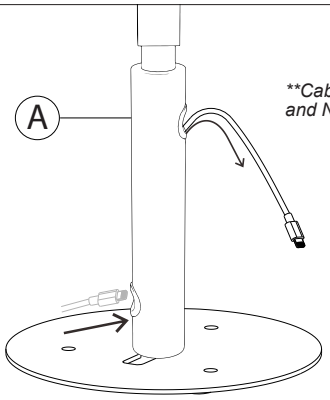


2A. Identify the hole at the bottom of the pole (A) through where cable routing should go. Then, fish the cable.

2B. Fish the cable through the pole and out of the top to the device as required.

Optional


Mounting into Surface

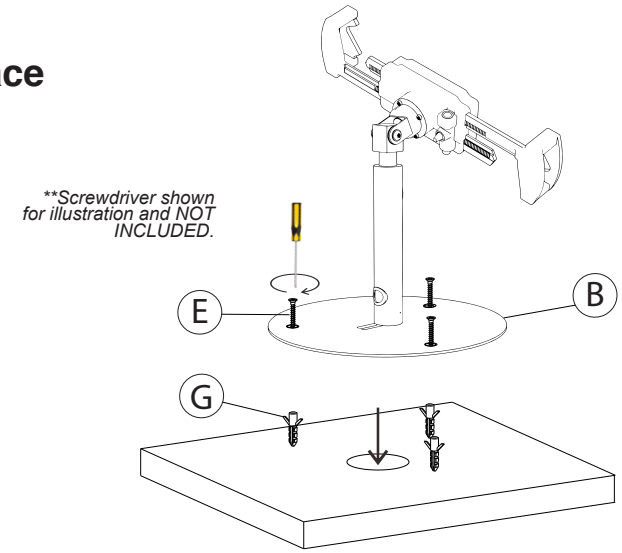


For a more permanent static setup, use a screwdriver (not included) and rotate in 3 screws (E) as illustrated into 3 predrilled holes at base (B) with the anchors (G) inserted until securely fastened.

36 Taaffe Place Brooklyn, NY 11205 support@ctadigital.com 718-963-9845 www.ctadigital.com


3. Inserting Tablet into Holder

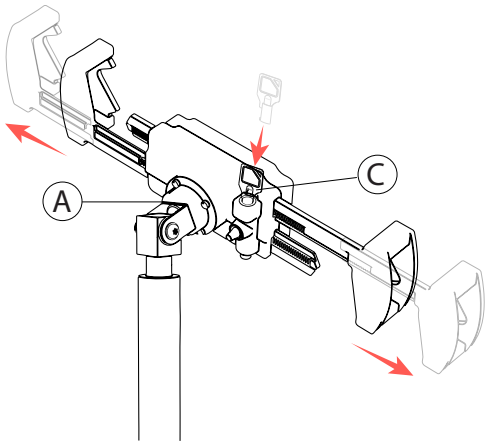

3A. Take the holder (A) and insert the key (C) to make sure you have the arms unlocked. Extend the arms out to match the corners of the tablet (not included).

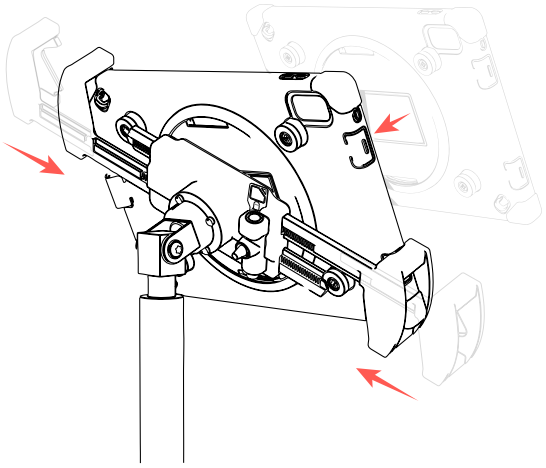

3B. Close the arms until the tablet is secured, take the key (C) out to have it locked in palce. As shown above.

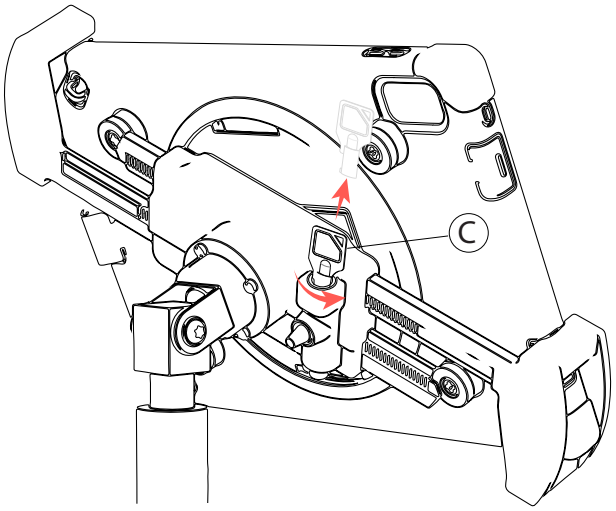

3C. Turn and take the key (C) out to make sure you have the locked and the tablet secured. As shown above.