




Locking Charging Cabinet for CTA Induction Cases up to 10 Devices

POW-LICC10


INSTALLATION - MANUAL

CONTENTS:

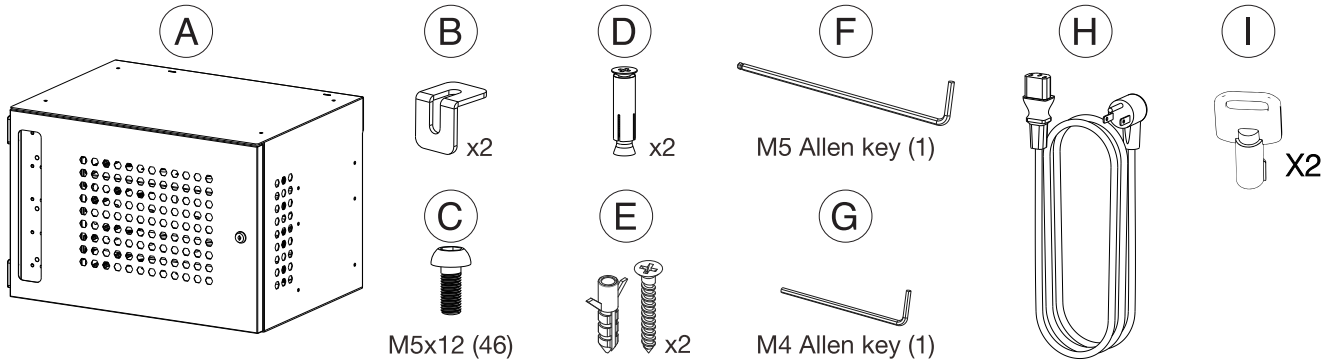

INSTALLATION:


1- Mounting CTA dock to shelves:

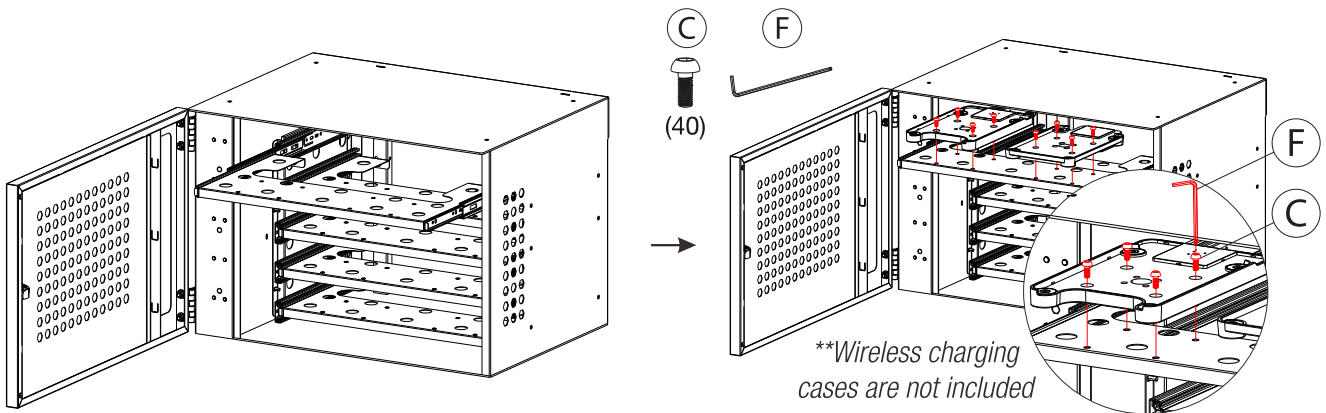

1A. Slide out the shelves to be able to connect the docks


1B. Fix docks to shelves with the screws (C) using provided tool (F) until securely tightened.

2- Setting up charging locker power:

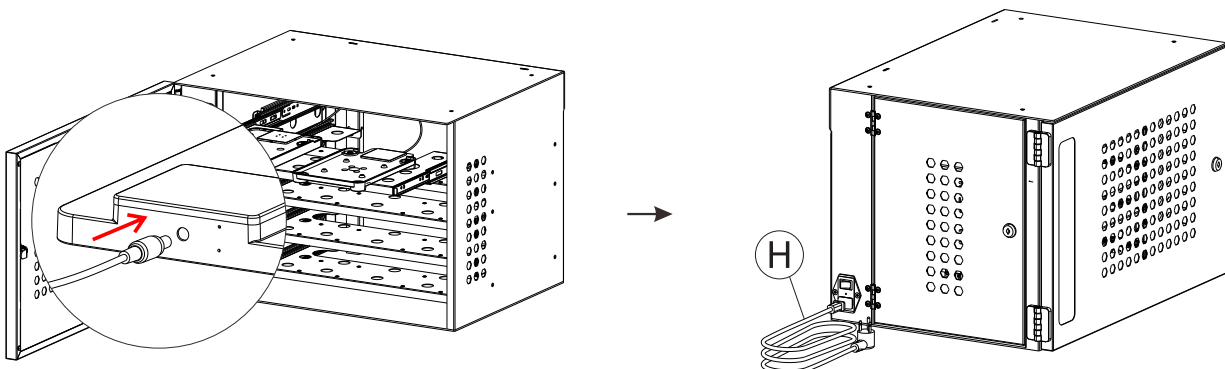


2A. Make sure all the docks are plugged into to the AC/DC power supply as illustrated above as well as the locker with the power cord (H).

3- How to insert case into locker:

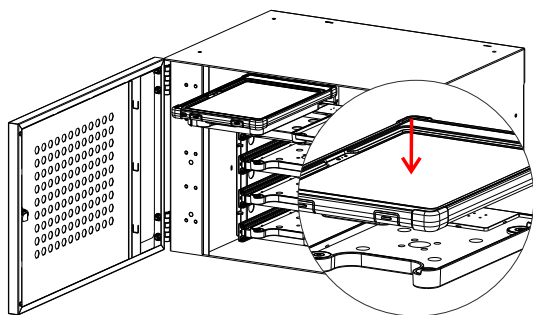


3A. Slide out the shelf, align properly the magnets of the case to the ones on the dock to get the case charging.



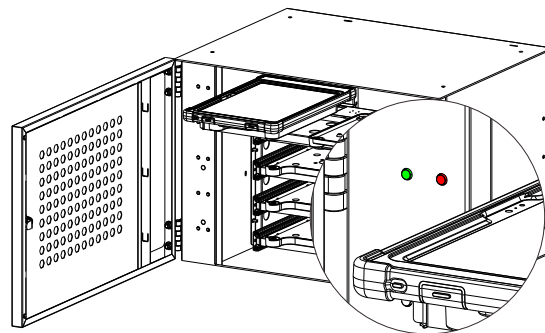


3B. During the docking process, you know you have a successful dock and charge when a light will illuminate as an indicator. Red indicates it's being charged and once the case is fully charged, the indicator light will change to green.


4- Mounting to wall:

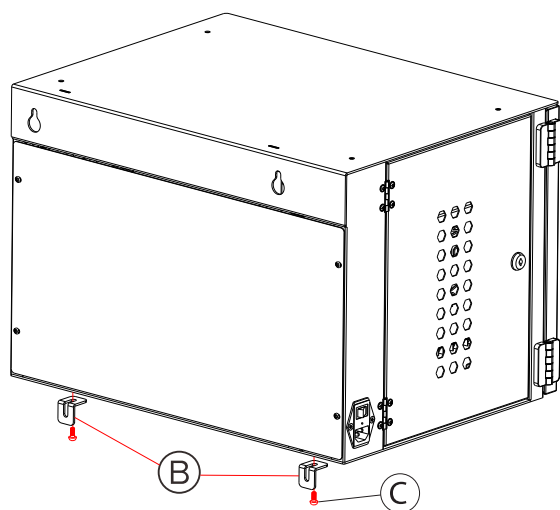


4A. Place the L shape bracket (B) under the locker using screws (C) to be able to fix it later.

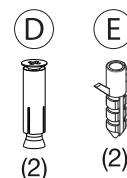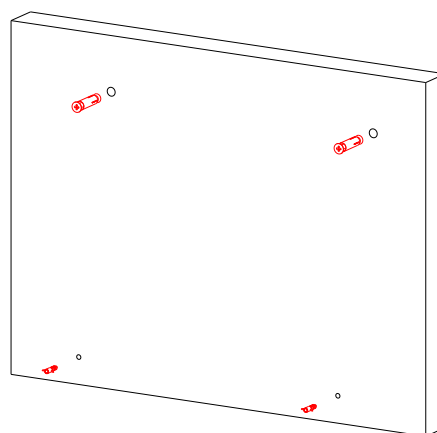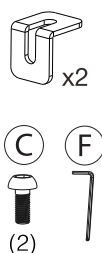

4B. Drill the upper holes (2) on the wall and then insert the two anchor-integrated screws (D). Repeat this process for the lower holes (2) and utilize the included anchors (E).

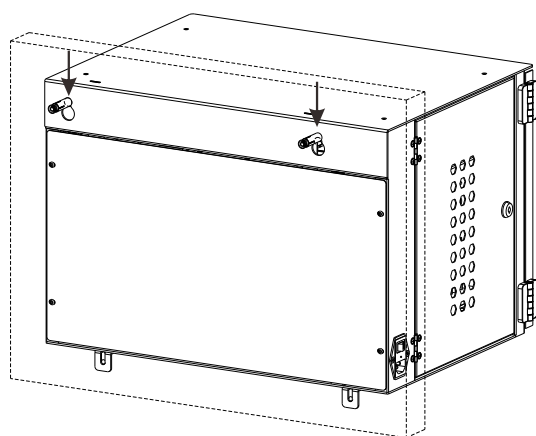


4C. Insert the locker into the two upper screws and slide it down until properly hung.

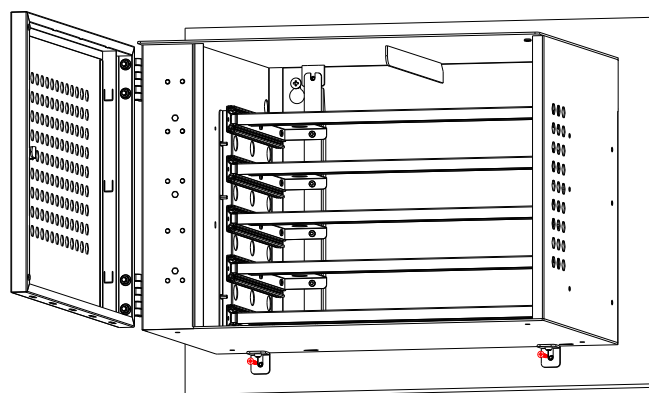


4D. After that secure it with the two screws (E) at the bottom L shape bracket (B) using a screw driver (not included) until securely fastened.

5- How to stack the lockers:

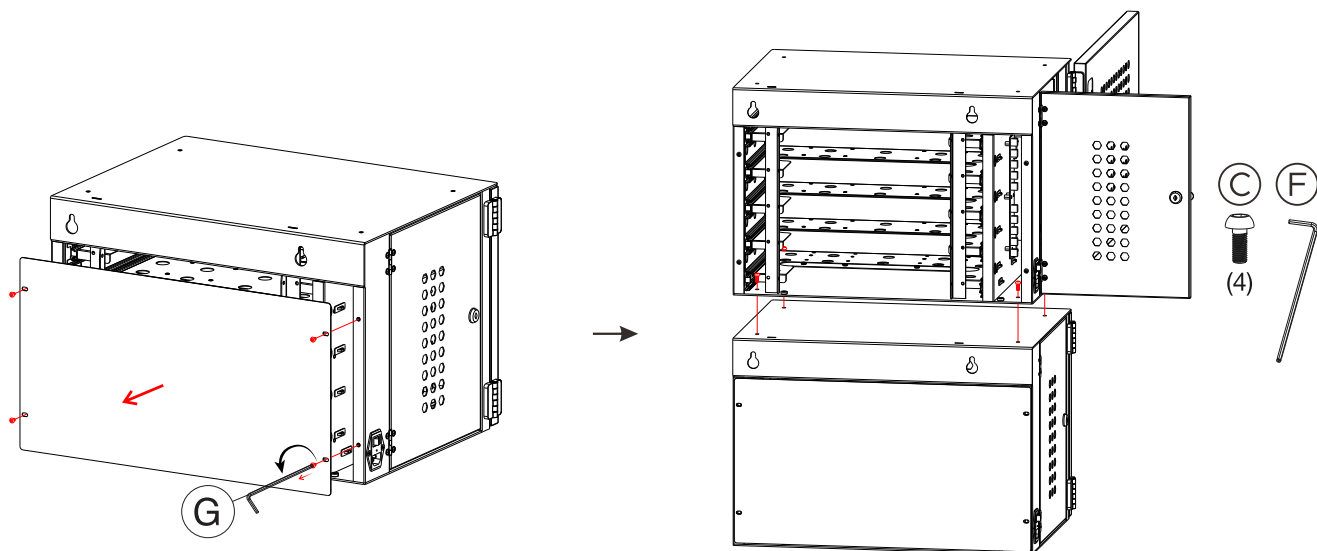


5A. Remove the back panel by removing the four screws using the provided tool (G).

5B. Place the locker on top of the other making sure all the holes are aligned, then screw in bolts (C) using provided tool (F).

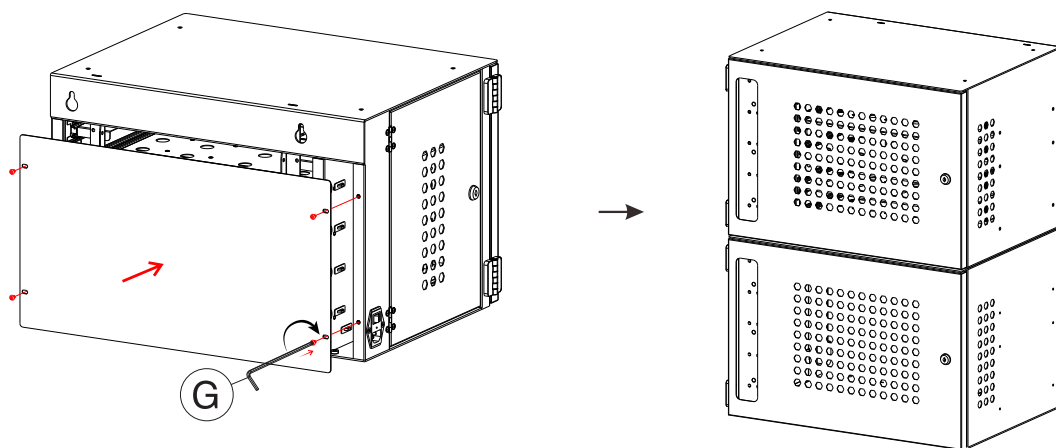

5C. Take the back panel back and fix all screws using the provided tool (G) to finish the process.

6- How to secure locker:

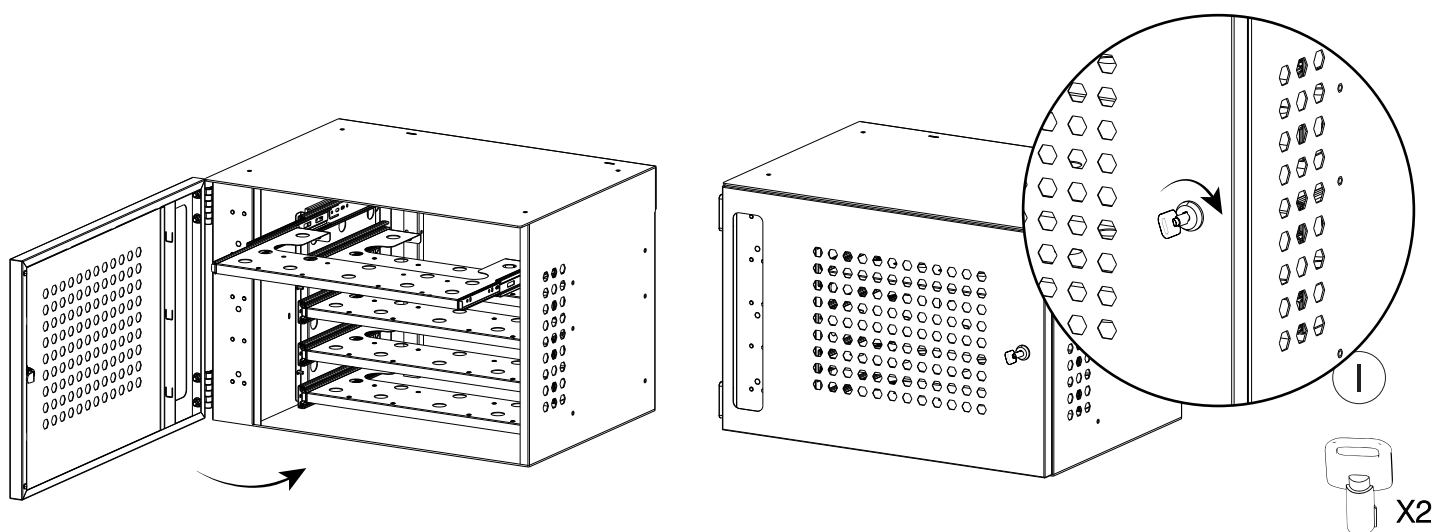

6A. Close the door then insert key (I) to lock and unlock. Same key can be used for main locker and acces panel.