




Rust Proof Security Gooseneck Clamp

PAD-HGTPS

INSTRUCTION - MANUAL


CONTENTS:

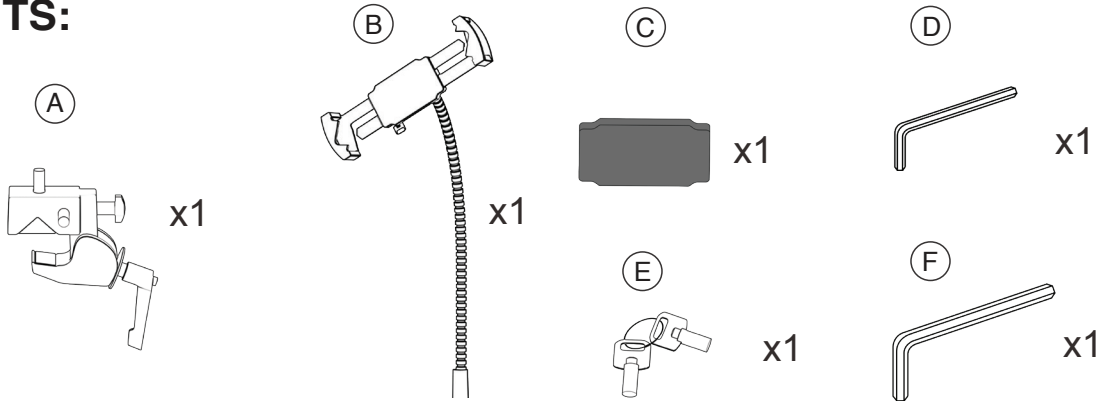

INSTALLATION:


1 Setting Up Clamp

Mounting to a Flat Surface

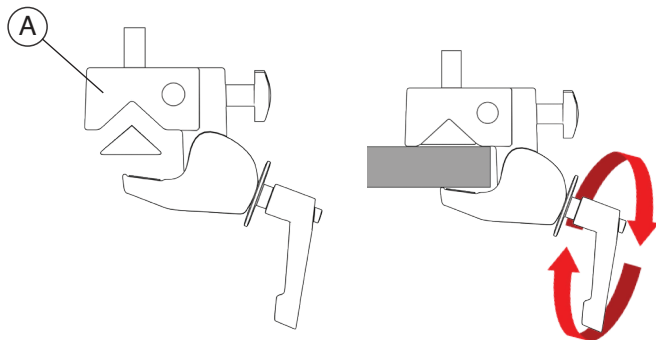

1A : Take clamp (A) and make sure to insert the wedge piece to prepare for the flat surface mount as illustrated.

Mounting to a Pole or Tube


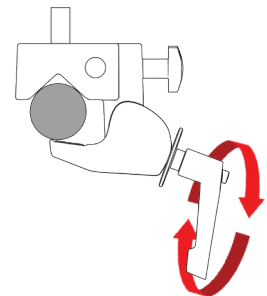


1B : Take clamp (A) and remove the wedge piece to prepare for pole/tube mounting as shown.

2 Connecting Clamp into Gooseneck


2A : Depending on the orientation of your surface your clamping onto, rotate in gooseneck (B) either at the top or side as needed. Rotate gooseneck onto the male metal connection bolt on the clamp until securely fastened.

2B : Use the smaller allen key (D) to screw in the small hole to tighten the gooseneck connection.

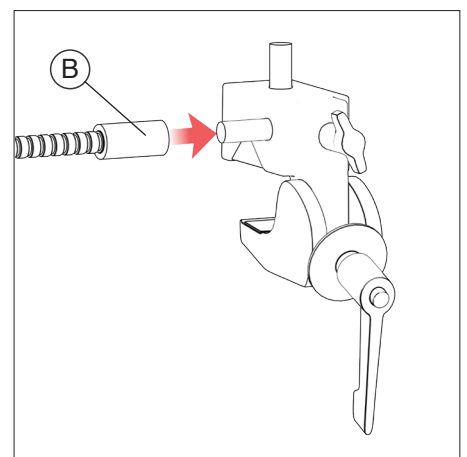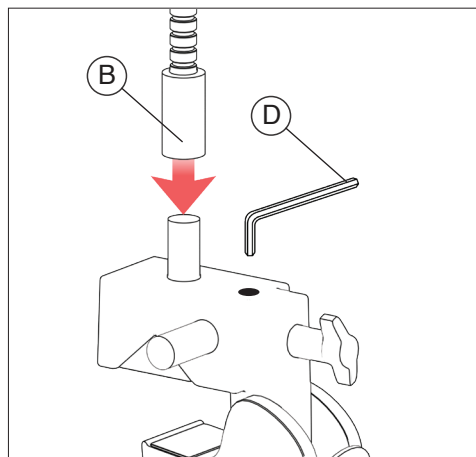


3 Setting up Tablet Holder


3A : When the tablet holder is in unlocked mode, hold down the release button on the back and extend arms to fit around tablet.

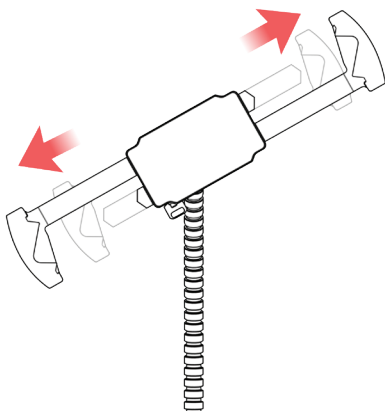

3B : Add the proper foam piece on your tablet. There are thin and thicker pieces depending on your tablet thickness. Peel off the back adhesive and stick it on as shown.

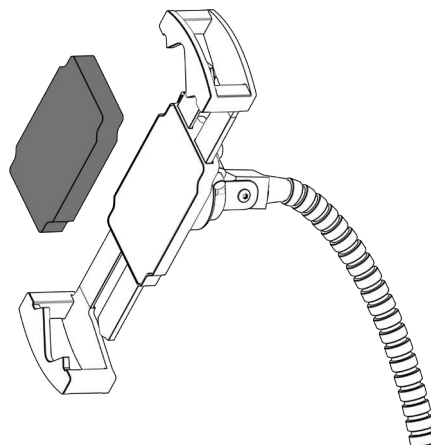


3C : When tablet is firmed in place, insert key and rotate 360 and remove to lock and secure in place

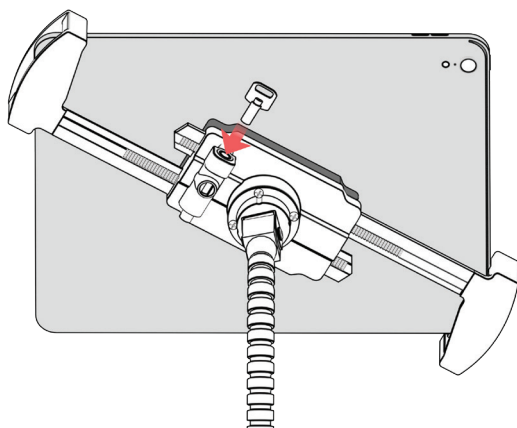


****TABLET SHOWN FOR ILLUSTRATION PURPOSES AND NOT INCLUDED**

4 Adjustability

4A : Simply bend and adjust your gooseneck to your desired height, angle and orientation.

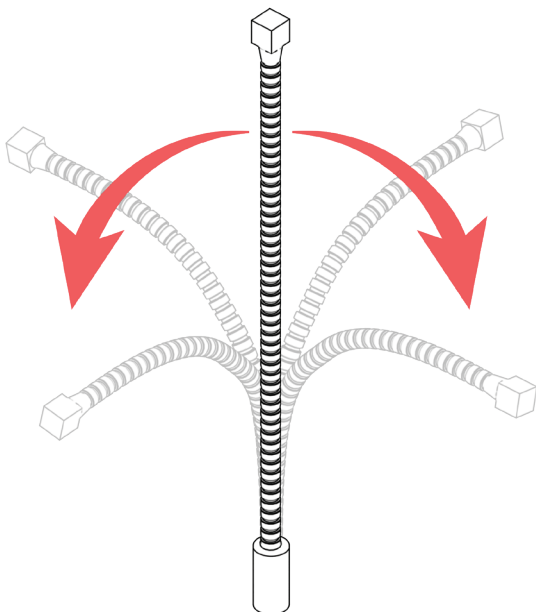

4B : At the tablet holder joint, tilt up and down for your ideal setup.

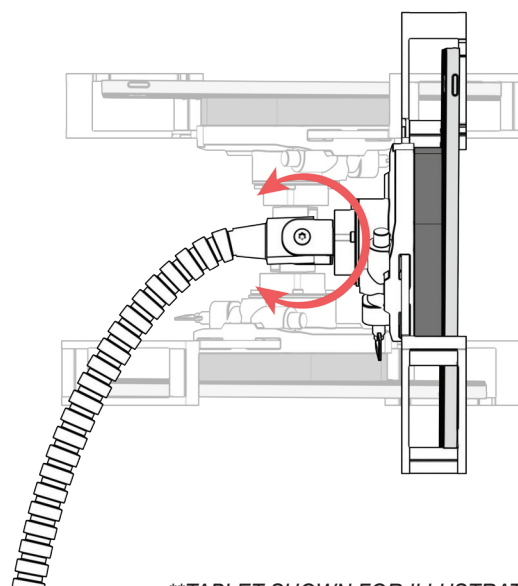

****TABLET SHOWN FOR ILLUSTRATION PURPOSES AND NOT INCLUDED**